



GAS FIREPLACE

ELEMENT MK2

900 | 1200 | 1500 | 1800



FEATURES

- Power balanced flue allows total flexibility during installation in two storey homes, apartments and commercial projects.
- Safety and simplicity with power-balanced flue.
- Versatile visuals to suit all spaces.
- Wi-Fi capability with the Real Flame app.
- Remote control – programmable remote with time and temperature control.

STAR RATING	up to 4.8 stars			
MAX HEAT OUTPUT	up to 9.1kW			
ROOM SIZE	approx. up to 110m ²			
MODEL	900	1200	1500	1800
GAS TYPE & INPUT	NG 22-28	NG 29-37	NG 32-38	NG 30-39
	LPG 22-28	LPG 27-33	LPG 29-38	LPG 30-39
	ULPG -	ULPG 25-30	ULPG -	ULPG 27-33

MEDIA BED OPTIONS



Redgum



Driftwood



Pebbles

TRIM OPTION



18MM TRIM
powdercoat black
*Includes Flance Kit
For Flush Wall Finish



50MM TRIM
powdercoat
black




TRIMLESS
powdercoat
black

ELEMENT MK2



UNIT DIMENSIONS

WITH 50MM TRIM

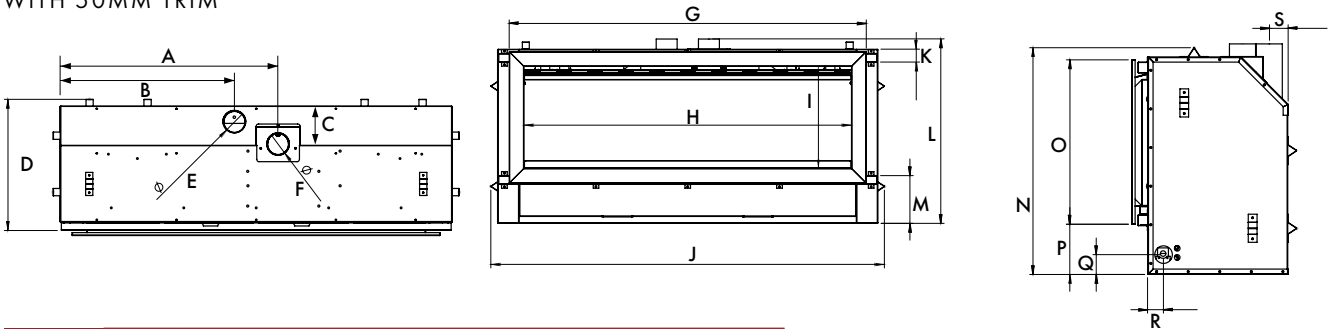


MODEL	A	B	C	D	E	F	G	H	I
E900	617	465	154	454	74.5	74.5	991	886	364
E1200	777	625	154	454	74.5	74.5	1291	1186	364
E1500	927	775	154	454	74.7	74.5	1591	1486	364
E1800	1077	925	154	454	74.5	74.5	1891	1786	364

MODEL	J	K	L	M	N	O	P	Q	R	S
E900	1100	46	657	170	645	468	143	56	45	52
E1200	1400	46	657	170	645	468	143	56	45	52
E1500	1700	46	680	170	645	468	143	56	45	52
E1800	2000	46	657	170	645	468	143	56	45	52

1. Install Element onto base and connect flue, gas and power.
2. Fit 18mm trim assembly.
3. Attach 4 sided flange kit to frame.
4. Remove 18mm assembly.
5. Clad wall to flange kit and finish.
6. Refit 18mm trim assembly.

MINIMUM FRAMEOUT DIMENSIONS

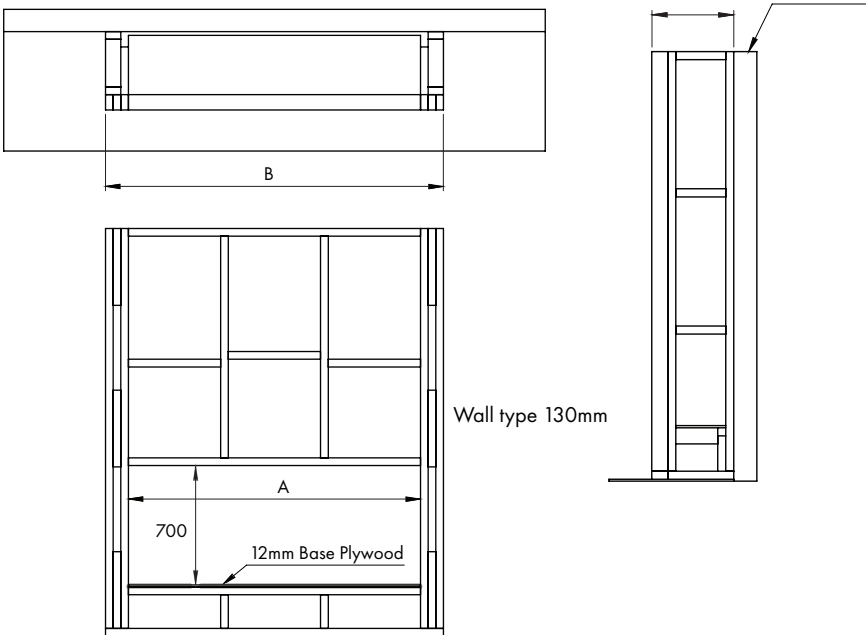

MODEL	900	1200	1500	1800
A	1120	1420	1720	2020
B	1390	1690	1990	2290

NOTE :

If the wall is being plastered we recommend fixing stopping bead up to the flange to give a clean shadow line. The depth of the flange profile is 22mm to allow for tiling or rendering. If plaster is used we recommend packing out to 22mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.realflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.