



BIO-ETHANOL FIREPLACE

ETLIS


ETLF8 | ETLF12

FEATURES

- The BEV Technology® guarantees burning that is free of smoke or ash.
- Flames created by burning ethanol vapors, ensuring that the fire has no direct contact with the liquid fuel.
- Adjust the ambience of the room with 3 flame height settings.
- Comes with remote and smartphone control.
- Automatic Refilling - Safely refill without the risk of spillage.
- Optional casing for easy installation.

APP FEATURES

- App functionality through Wi-Fi.
- Detects fuel levels.
- Fire start and stop functionality.
- Child lock activation.
- Self diagnostics functionality.

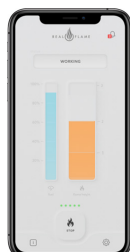

DISPLAY CONFIGURATION



SINGLE SIDED



DOUBLE SIDED



3 SIDED







4 SIDED



ROOM DIVIDER

STAR RATING	up to 4.6 stars	
MAX HEAT OUTPUT	up to 9.4kW	
ROOM SIZE	approx. up to 110m ²	
MODEL	ETLF8	ETLF12
MIN FUEL USAGE	0.5L/hr	0.5L/hr
MAX BURN TIME	9hrs	14hrs
TANK SIZE	4.5L	7L

UNIT DIMENSIONS

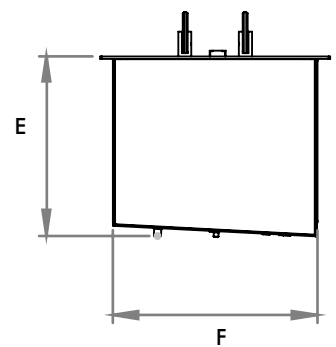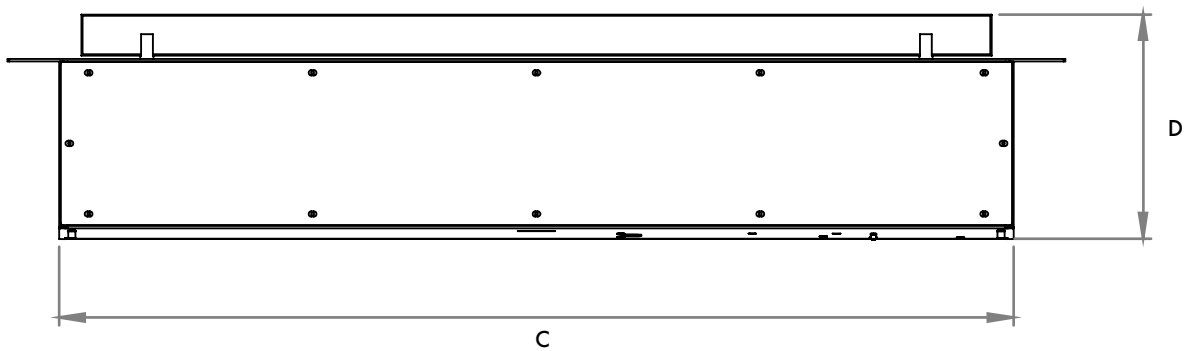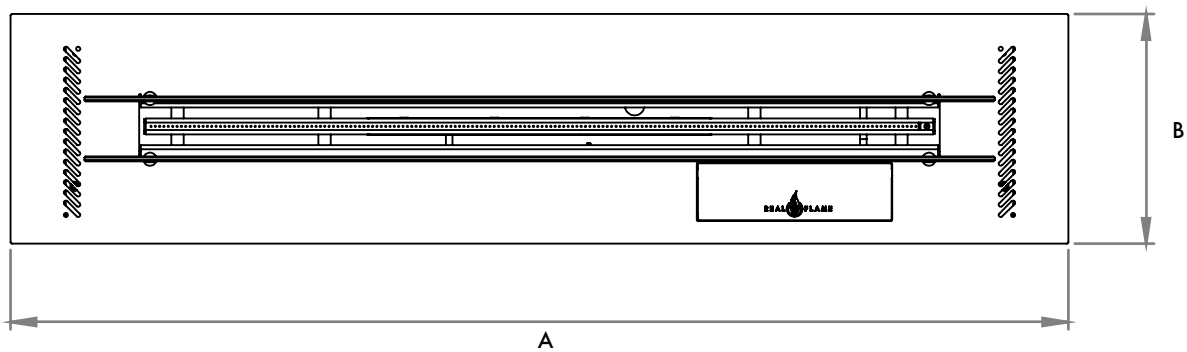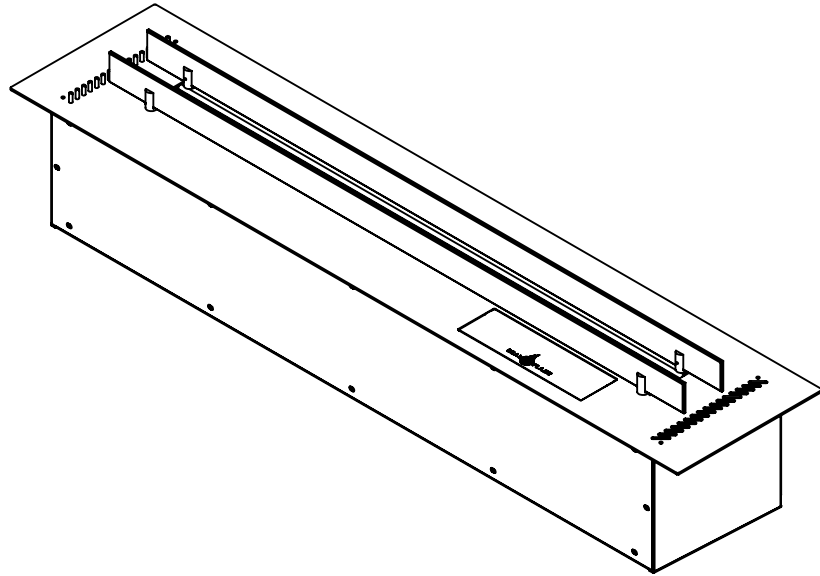

MODEL	A	B	C	D	E	F
ETLF8	890	280	764	273	219	255
ETLF12	1290	280	1164	273	219	255


NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.reallflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.

SINGLE SIDED INSTALLATION INFORMATION


SURROUND DIMENSIONS

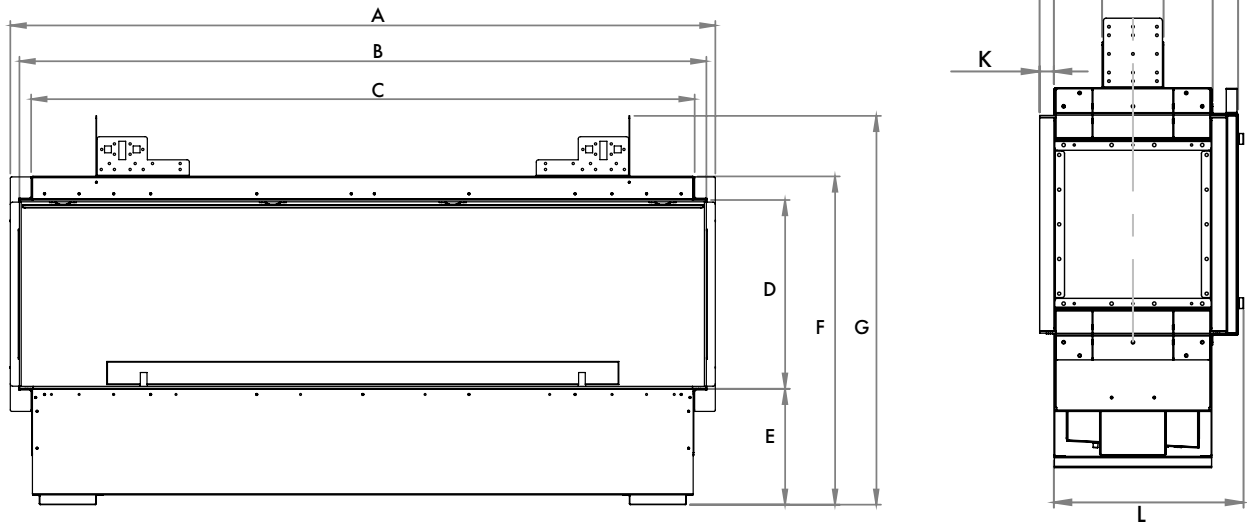

MODEL	A	B	C	D	E	F	G	H	I	J	K	L
ETLF8	1128	1089	1035	410	251	712	843	383	296	115	27	356
ETLF12	1528	1489	1435	410	251	712	843	383	296	115	27	356

MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

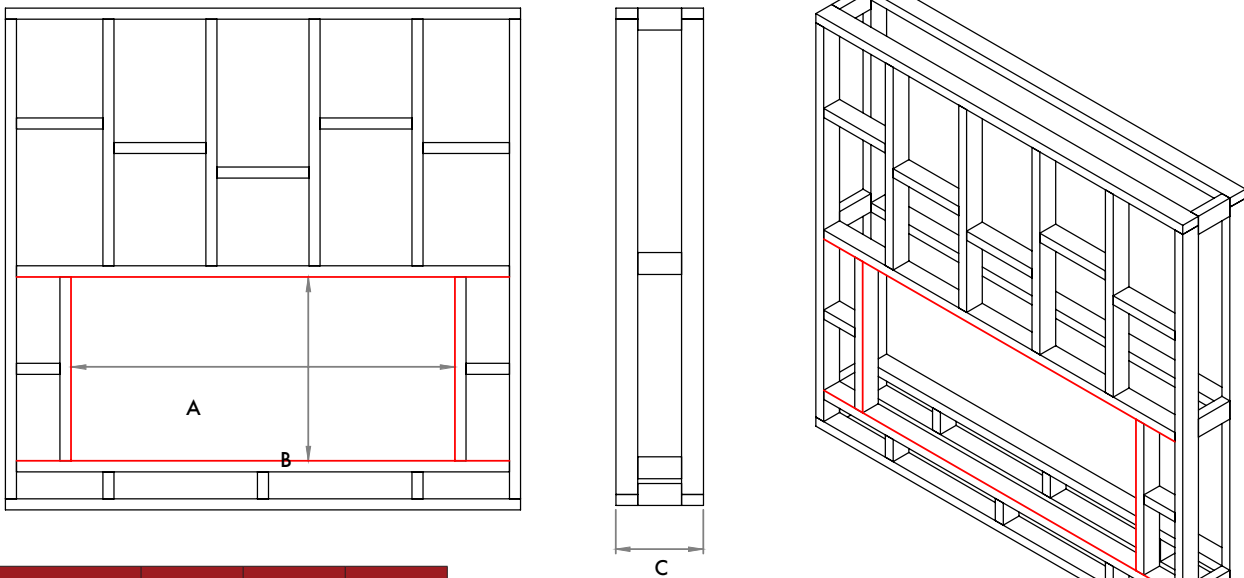

MODEL	A	B	C
ETLF8	1160	750	360
ETLF12	1560	750	360


NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.realflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.

DOUBLE SIDED INSTALLATION INFORMATION


SURROUND DIMENSIONS

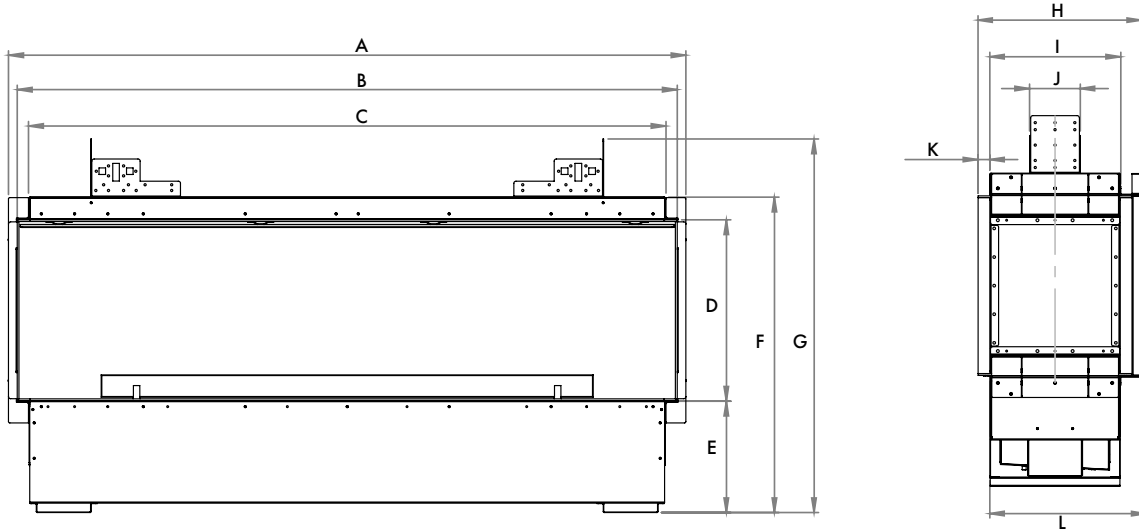

MODEL	A	B	C	D	E	F	G	H	I	J	K	L
ETLF8	1128	1089	1035	410	251	712	843	350	296	115	27	296
ETLF12	1528	1489	1435	410	251	712	843	350	296	115	27	296

MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

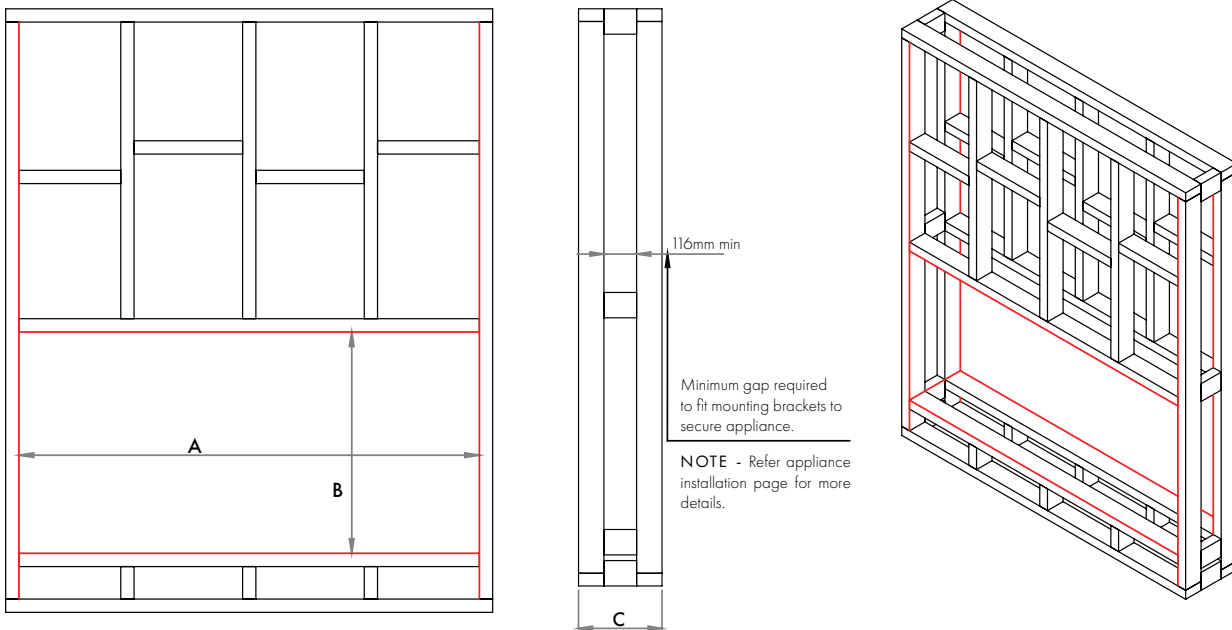

MODEL	A	B	C
ETLF8	1160	750	296
ETLF12	1560	750	296


NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.reallflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.

CORNER INSTALLATION INFORMATION




SURROUND DIMENSIONS

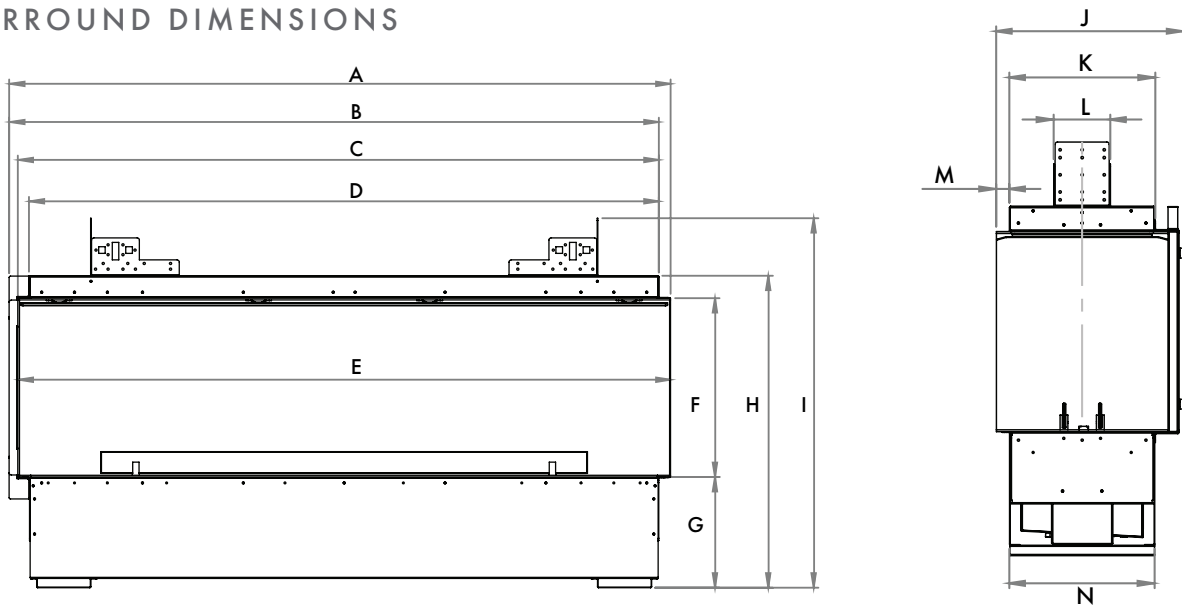

MODEL	A	B	C	D	E	F	G	H	I	J	K	L	M	N
ETLF8	1109	1082	1062	1035	1089	410	251	712	483	383	296	115	27	296
ETLF12	1509	1482	1462	1435	1489	410	251	712	843	383	296	115	27	296

MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

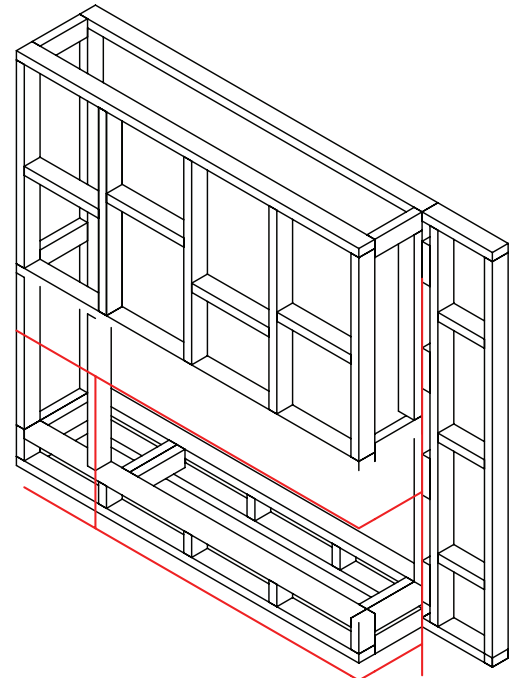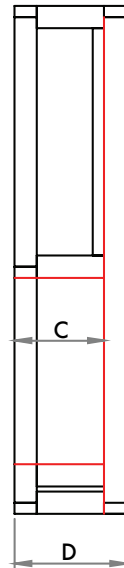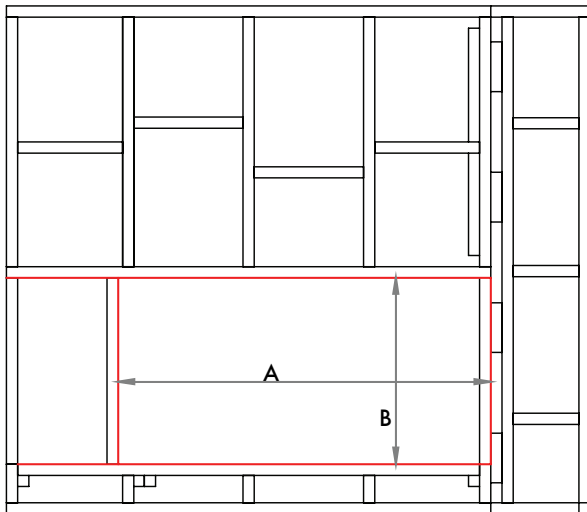

MODEL	A	B	C	D
ETLF8	1100	750	360	450
ETLF12	1500	750	360	450


NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.realflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.

THREE SIDED INSTALLATION INFORMATION




SURROUND DIMENSIONS

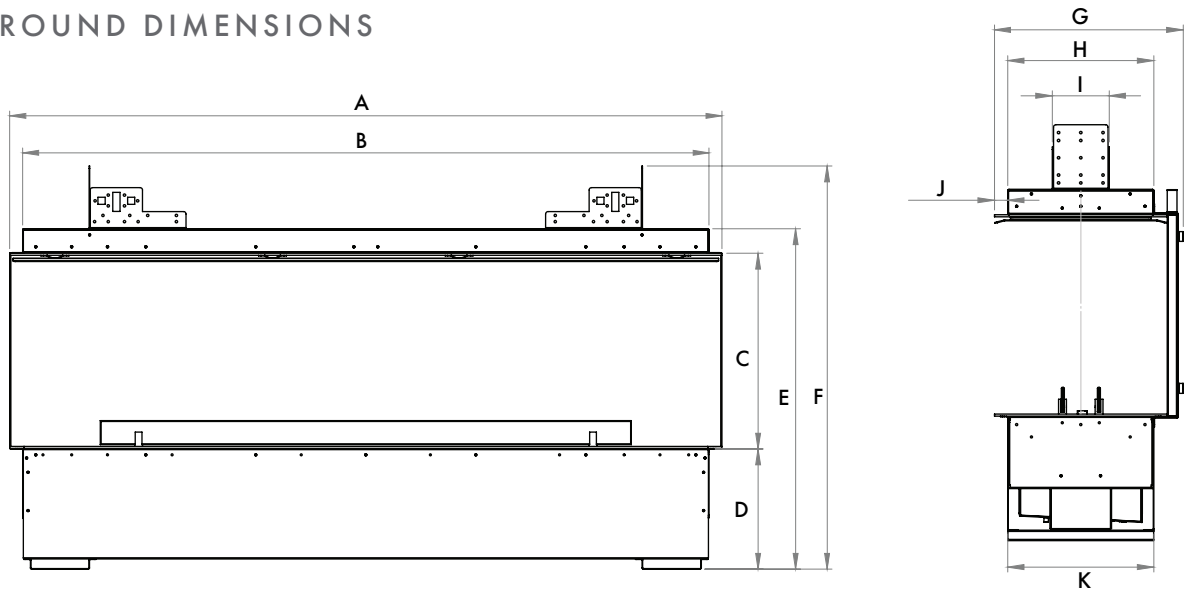

MODEL	A	B	C	D	E	F	G	H	I	J	K
ETLF8	1089	1035	410	251	712	843	383	296	115	27	296
ETLF12	1489	1435	410	251	712	843	383	296	115	27	296

MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

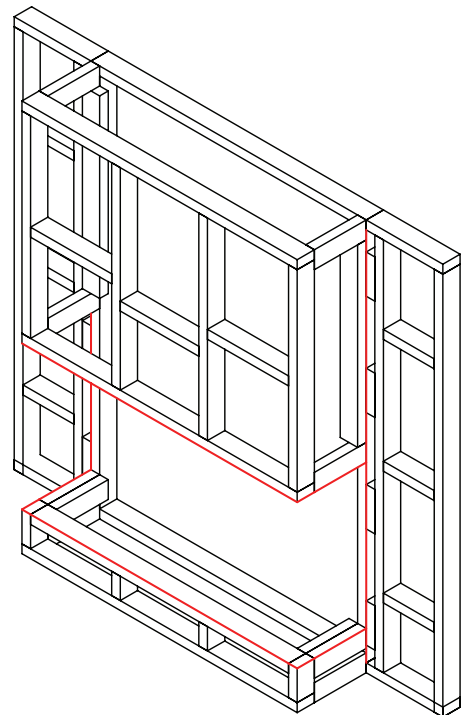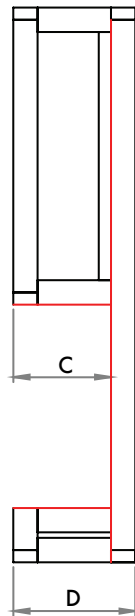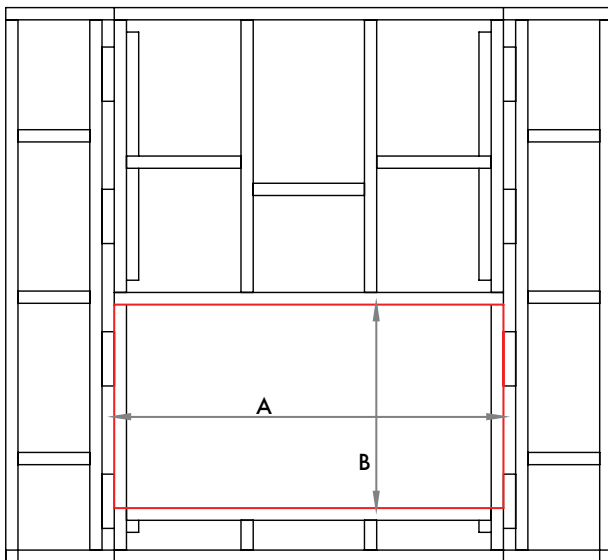

MODEL	A	B	C	D
ETLF8	1035	750	360	450
ETLF12	1435	750	360	450


NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.realflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.

ROOM DIVIDER INSTALLATION INFORMATION



SURROUND DIMENSIONS

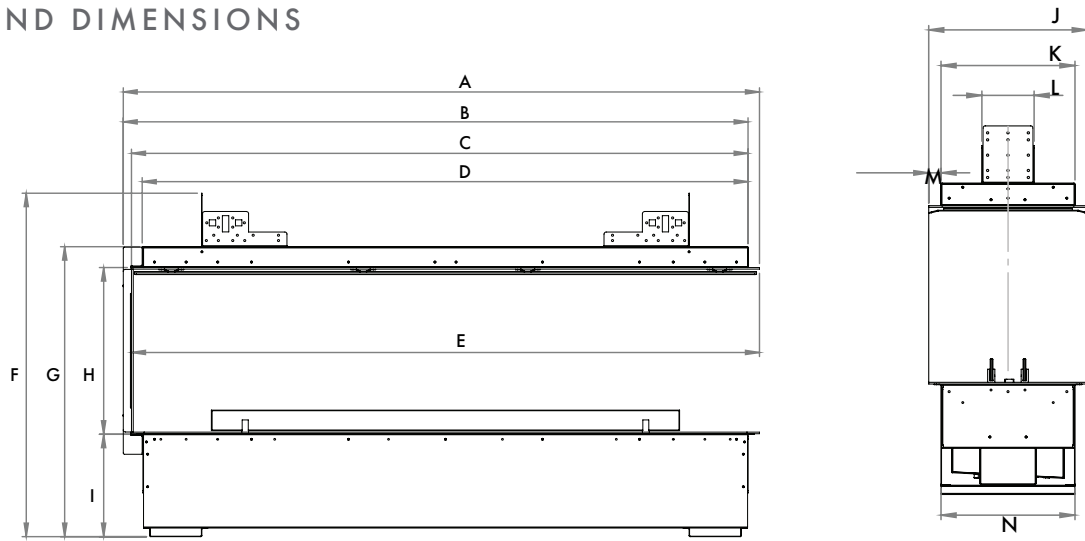

MODEL	A	B	C	D	E	F	G	H	I	J	K	L	M	N
ETLF8	1109	1082	1062	1035	1089	843	712	410	251	350	296	115	27	296
ETLF12	1509	1482	1462	1435	1489	843	712	410	251	350	296	115	27	296


MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

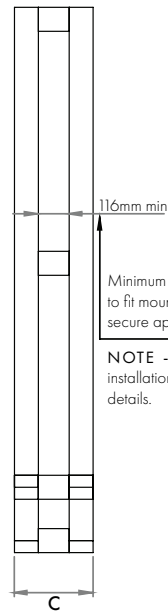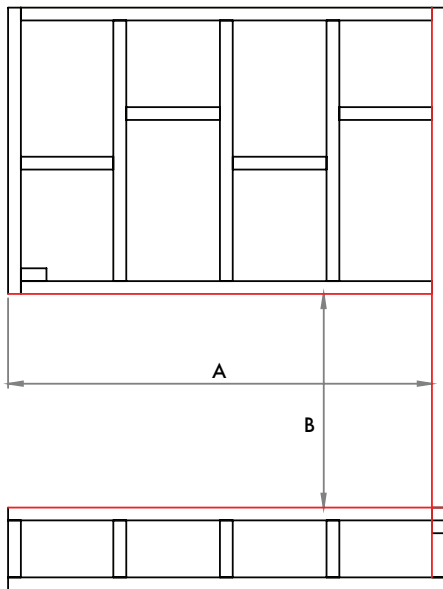

Minimum gap required to fit mounting brackets to secure appliance.

NOTE - Refer appliance installation page for more details.


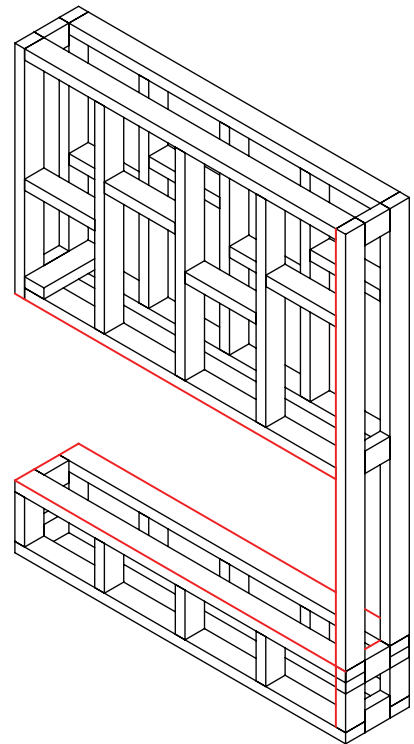


MODEL	A	B	C
ETLF8	1090	750	296
ETLF12	1490	750	296

NOTE All dimensions are in mm.

FOUR SIDED INSTALLATION INFORMATION



SURROUND DIMENSIONS

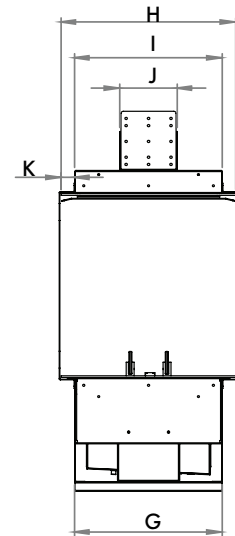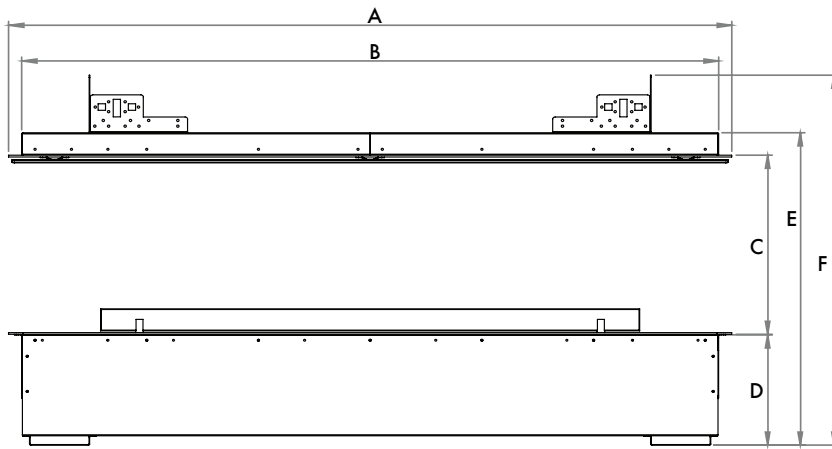

MODEL	A	B	C	D	E	F	G	H	I	J	K
ETLF8	1089	1035	410	251	712	843	296	350	296	115	27
ETLF12	1489	1435	410	251	712	843	296	350	296	115	27


MINIMUM FRAMING DIMENSIONS

WITH PINE FRAME

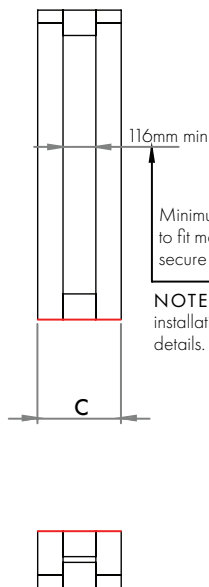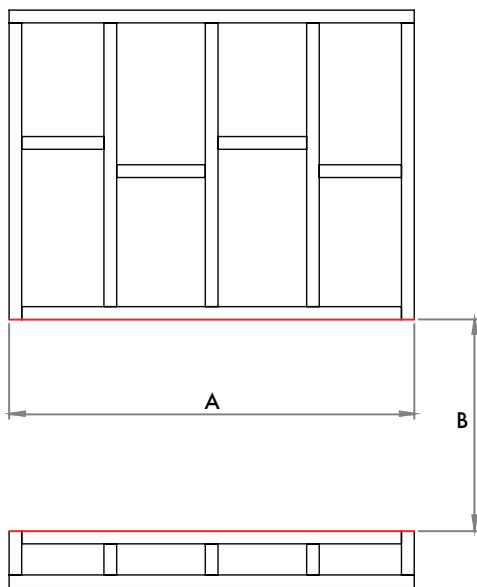

Minimum gap required to fit mounting brackets to secure appliance.

NOTE - Refer appliance installation page for more details.

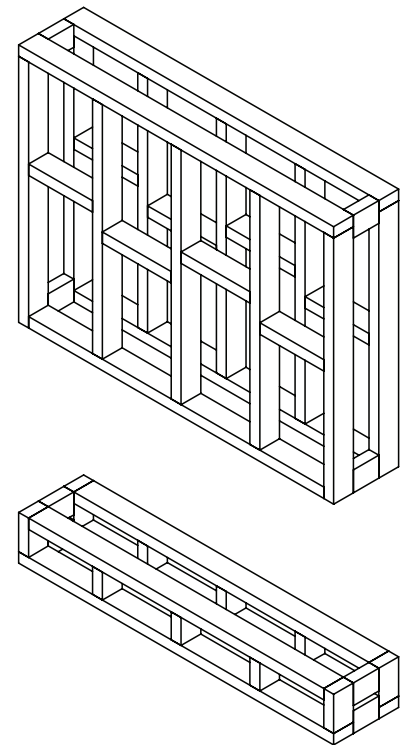

MODEL	A	B	C
ETLF8	1035	750	296
ETLF12	1435	750	296

NOTE All dimensions are in mm.

Glen Dimplex Australia Ltd

Glen Dimplex Australia Ltd's policy is one of continuous development. We reserve the right to change size and specifications without notice. For the latest product information and warranty details please refer to www.realflame.com.au. Please refer to the installation and operation instructions before having your Real Flame installed. A full set of these instructions is supplied with each fire.